

Events

Are used to send on STB/group of STB certain events. (Event are not directly send to STB they are stored on server and STB time to time ask server for available events)

Types of events

- **Send_msg** - sens message to STB. Example: "Today from 13:00 till 15:00 where will be technical works so server can be unavailable."
- **Reboot** - STB reboot.
- **Reload portal** - portal reload.
- **Update_channels** - update channel list on STB.
- **Play_channel** - Play certain channel on STB.
- **Mount_all_storages** - Was used for MAG-100.
- **Switch_off** - On client interface will be : "STB is blocked" (untill reload)
- **Update_image** - Update STB via HTTP.(URL of update should be added in config.)

From:

<http://docs.infomir.com.ua/> -

Permanent link:

<http://docs.infomir.com.ua/doku.php?id=en:stalker:events>

Last update: **2019/05/17 11:23**

