

Language, Time & Date, Location & Weather

Interface language

In internal software of MAG200/250

- Go to “**System settings**” by pressing «**Setup**», «**Services**» or «**SET**» on the remote control (depending on the version the remote control)
- “**Advanced settings**”
- “**Language**” - select the language by pressing the left or right on the remote control
- Confirm selection by pressing the “**OK**” button at the bottom of the Settings window
- To correctly apply the localization the restart is required!!!

Time and Date

STB MAG-200/250 used for time synchronization protocol **NTP**

If your network does not use the NTP-server, you can use the shared external NTP-servers. **To work correctly with an external NTP, you must have an Internet connection on the STB.**

Servers list:

[Europe](#)

[North America](#)

[Oceania](#)


[Asia](#)

Additional information: pool.ntp.org

[Information about using of the pool NTP.](#)

To do this in internal software of MAG-200/250

- Enter the “**System settings**” - by pressing «**Setup**», «**Services**» or «**SET**» on the remote control (depending on the version the remote control)
- Select “**Servers**”
- In the input field “**NTP server**” enter the address of the NTP server
- Confirm “**OK**”
- Enter the “Advanced Settings”
- In the input field “**Time zone**” enter your [time zone](#)
- Confirm “**OK**”
- “**Reboot**”

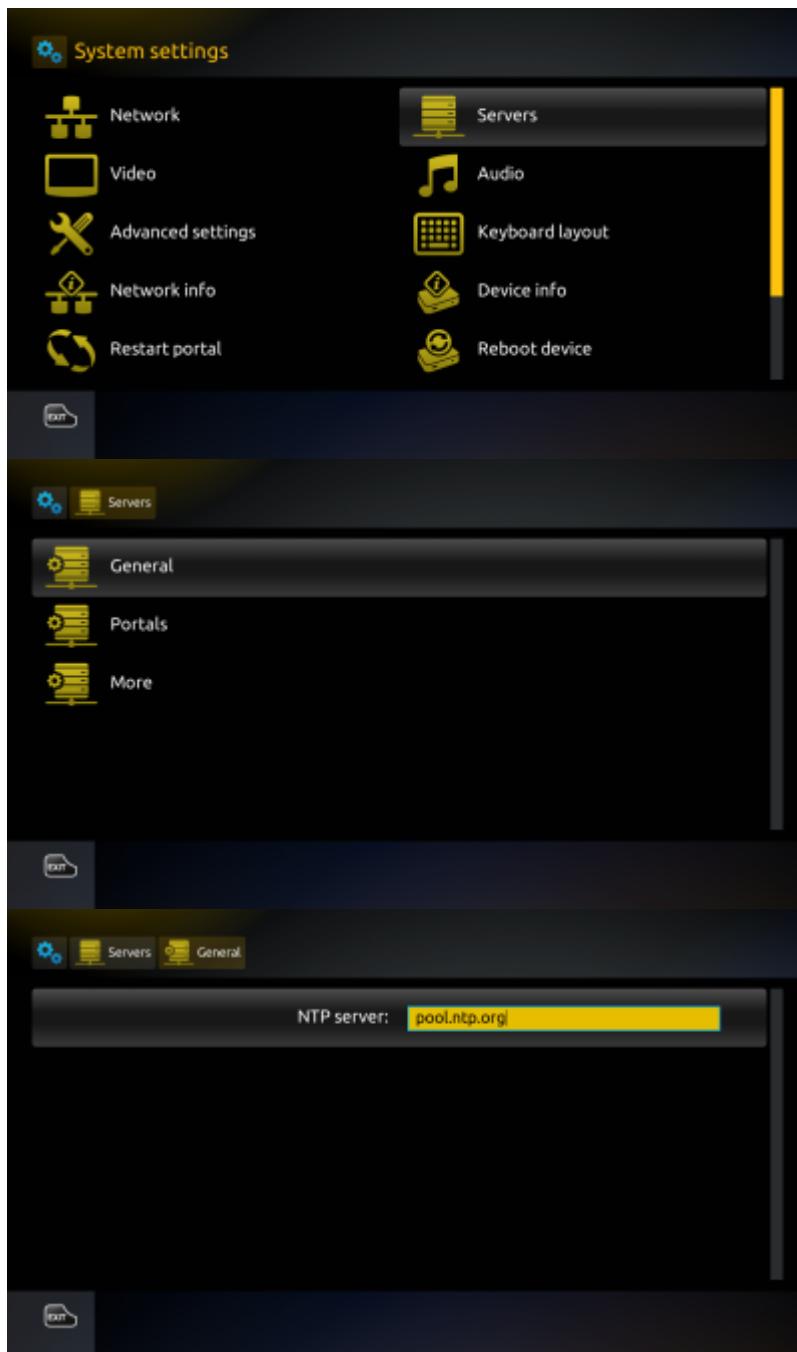

Location and Weather

- In the main menu of internal software select "**Weather**"
- Enter the name of the city or locality for which the weather will be displayed.

Using the onscreen keyboard or USB keyboard (Call/hide the onscreen keyboard press the "**KB**" button on the remote control)

- In the drop-down list select the locality, and press "**OK**" button on the remote control

From:
<https://docs.infomir.com.ua/> -



Permanent link:
https://docs.infomir.com.ua/doku.php?id=en:stb_webkit:faq:localization

Last update: **2019/05/17 11:23**