

Configuring the media server (UPnP)

IPTV STB MAG-200 can play content from a media server (UPnP).

Enable UPnP client in the internal software STB MAG200/250

1. System settings (SETUP button on the RC).
2. Advanced settings.
3. UPnP client enabled: Off - UPnP client is off, LAN - UPnP is enabled on the LAN interface, Wireless - UPnP is enabled on the Wi-Fi interface.

UPnP Linux OS, Mac OS

For example: [MediaTomb](#)

UPnP Windows 7

For example: [TVersity](#)

In the OS Microsoft Windows 7 contains built-in UPnP:

[Enable UPnP Windows 7](#)

[Stream your media using Windows Media Player](#)

From:
<https://docs.infomir.com.ua/> -

Permanent link:
https://docs.infomir.com.ua/doku.php?id=en:stb_webkit:faq:media_server_upnp

Last update: **2019/05/17 11:23**

