

In the **Public or old** (before 0.2.14-r8) versions:

Login: **root**

Password: **930920**

Port: **22**



**Attention!!!** Beginning from version 0.2.14-r8 the changes were implemented in security and update system.

**SSH is locked** - In **manufacturer firmware version** (firmware version, which is provided by manufacturer for autoupdate and update from internal portal).

**SSH is open** at standard port - In **Public firmware versions**, Public firmware version is provided in [soft.infomir.com.ua](https://soft.infomir.com.ua).

[New instructions and utilities for custom firmware making](#)

## SSH - change password, port, disabel/enable

### Change port

- MAG250/254/270 - `/rootfs/etc/openssh/sshd_config`
- MAG (Broadcom based) - `/etc/rc.d/rcS.d/S60netsrv`. In the line dropbear you need to specify the required value off SHH port. For example: `dropbear -p 2222`.
- MAG (HiSilicon based) - `/etc/init.d/S81dropbear`. Line `TARGET_BIN=/sbin/dropbear` change for example to `- TARGET_BIN="/sbin/dropbear -p 2222"`

### Change password

- 1) Login via SSH on STB
- 2) Run **passwd** and change password
- 3) Run **cat /etc/shadow** and copy the part from string starting from **root**
- 4) Past copied string to **/rootfs/etc/shadow** (rootfs that you will using to [building firmware](#))

### Disable SSH

Delete script **etc/rcS.d/S30ssh** and **/usr/sbin/sshd**

From:  
<https://docs.infomir.com.ua/> -

Permanent link:  
[https://docs.infomir.com.ua/doku.php?id=en:stb\\_webkit:faq:ssh\\_login\\_password](https://docs.infomir.com.ua/doku.php?id=en:stb_webkit:faq:ssh_login_password)

Last update: **2019/10/09 12:53**

