

# FAQ

## Firmware Update

[How to update firmware](#)

[How to flash the second image BootLoader](#)

## Settings. BIOS (Bootloader)

[How to enter the BIOS](#)

[Reset BIOS to factory settings](#)

[How to see the firmware version and device information?](#)

[Change boot mode DHCP/NAND/NAND2](#)

## Internal software (Embedded Portal)

### **Language, time, date**

[Setting the display language, date, time, location](#)

### **Playlist**

[How to load the channel list \(Playlist\)](#)

### **Wi-Fi**

[Supported Adapters, configure Wi-Fi connection](#)

[Multicast proxy - Configuring & using](#)

### **UPnP**

[Configuring the media server \(UPnP\)](#)

### **Video mode, Graphics Res**

[Video output mode \(TV System\) and the Graphics Resolution \(Graphic res.\)](#)

[How to change the video output mode \(TV System\) and the Graphics Resolution \(Graphic res.\)](#)

[Connecting the HDMI-DVI](#)

## Other

[SSH - login, password for connect via SSH. Password change. Disable SSH](#)

[How to program a programmable remote control](#)

[DHCP-server Configuration](#)

[External IR Receiver](#)

[RC Code IRDA-4807/4513](#)

[RCA Pinout](#)

[How to make screenshot from STB](#)

[Remote control - application for Android OS and iOS](#)

[How to add external portal](#)

[Keystroke emulation](#)

[How to configure share folders on PC with MS Windows \(SAMBA\)](#)

[MAG256 - Boot mode selection, resetting to factory settings](#)

## Middleware "Stalker"

[Current version](#) · [Installation](#) · [Settings](#)

## Firmware Image. Embedded portal customization. Modules. Functions

**Bootloader - logo, Splash**

[Splash screen when stb is booting](#)

[Bootloader logo](#)

## **Build firmware**

[Make firmware image - for 0.2.14-r8 version and higher](#)

[Make firmware image - for previous version \(before 0.2.14-r8\)](#)

[Most used environment variables](#)

## **Embedded portal - customization, functions, modules**

### **For 0.2.18 version and higher**

[Firmware autoupdate module](#)

[Check variables at boot STB and start portal](#)

[Setting rules for "Syst. Settings"/"Settings", portal loader page/page 404. Disable/enable items. etc.](#)

[Function of playlist autoupdating](#)

[Compiling embedded portal from source codes](#)

### **For previous versions (before 0.2.18)**

[Autoupdate module description](#)

[Checking of variables at the portal start](#)

[Portals page and internal portal \("SET/SETUP"\) disabling while loading](#)

[Function of playlist autoupdating in the internal portal](#)

## **Localization**

[Localization of the portal interface to other languages. Usin the "Poedit" aplication](#)

## **Testing and Debugging**

[Testing and debugging. Practices and examples](#)

# **API**

[JS API - for firmware before 0.2.18](#)

[JS API - additive information and changes for 0.2.18 firmware](#)

[API usage examples](#)

## TimeShiftAPI v3

Return to application 1 after exit from application 2

From:

<https://docs.infomir.com.ua/> -

Permanent link:

[https://docs.infomir.com.ua/doku.php?id=en:stb\\_webkit:faq:start](https://docs.infomir.com.ua/doku.php?id=en:stb_webkit:faq:start)

Last update: **2019/05/17 11:23**

