

System Recovery Utility

1. Power off STB
2. Push and hold "Menu" button on RC. (Remote control should be directed to STB).
3. Still holding Menu button power stb on.
4. Wait for (~10 seconds) menu "System Recovery Utility"
5. Release Menu button.

From:
<https://docs.infomir.com.ua/> -

Permanent link:
https://docs.infomir.com.ua/doku.php?id=en:stb_webkit:mag256:system_recovery_utility

Last update: **2019/05/17 11:23**

