

Update Firmware

Using USB flash drive in "System Recovery Utility"

1. USB drive FAT32
2. Create directory mag322 or mag324 on the USB-drive and place file imageupdate into directory.
3. Go to "System Recovery Utility" menu.
4. Select - "Upgrade Tools" - "Upgrade Software" - "Using USB" - Confirm "OK".
5. After the update successful - STB must be rebooted.

Using a USB flash drive in the embedded portal

1. Create directory mag322 or mag324 on the USB-drive and place file imageupdate into directory.
2. Go to "System settings" by pressing «Setup», «Services» or «SET» on the remote control (depending on the version the remote control)
3. Select "**Software update**".
4. Select update "**From USB**" ⇒ "**Start update**". If the preceding items are correct you will see a window with information about the current software version, select the drive or partition and the file path.
5. Select "**Verify**". If the test is successful you'll see information about the availability of new versions of software.
6. Select "**Start update**" to begin the update.
7. After the update successful - STB must be rebooted.

Using the HTTP method from inner portal

Beginning from firmware version ПО 0.2.14-r8 Public firmware versions ¹⁾ and manufacturer firmwares ²⁾ (manufacturer firmware) are updating from embedded portal (HTTP, USB) on manufacturer firmware only. To update STB on Public firmware soft.infomir.com.ua it is necessary to use updating methods from Bootloader menu (Multicast, USB&Bootstrap ...). For STB updatign from embedded portal or MiddleWare using HTTP or USB storage device on custom/other firmwares which are different from manufacturer it is necessary to make customized image according new instructions.

Image making: [Image making \(PublicImage, CustomImage, OperatorImage\)](#)

SSH access in Public and manufacturer firmwares: [SSH](#)

"Settings" of the internal portal (Autoupdate firmware system)

If you are using a standard software image (factory image), software will be updated from the server of factory on the current stable version.

- Open "**Settings**" of the internal portal;
- Choose "**Update software now**";
- In the opened window "**Autoupdate**" choose the list of "**Available versions**" by pressing "**OK**" - The latest available version is on top of the list;
- Choose necessary firmware version;
- Move "focus" to "**Update**" using buttons on RC (up, down, left and right);
- Choose "**Update**" by pressing "**OK**" on RC;
- Wait until STB will be updated. Updating process is displayed as filling of progress-bar and comments. STB will be **rebooted automatically** after update.

"System settings" in the inner portal (From HTTP)

If you are using a standard software image (factory image), software will be updated from the server of factory on the current stable version.

- Go to "**System settings**" by pressing «**Setup**», «**Services**» or «**SET**» on the remote control (depending on the version the remote control)
- "**Software update**" - Download method... "**From HTTP**".
- "**Start Update**".
- "**Verify**". If the test is successful you'll see information about the availability of new versions of software.
- "**Start update**" - to begin the update.
- After the update successful - STB must be rebooted.

In standart software image (factory image) there is such updating address: for MAG256 - <http://mag.infomir.com.ua/256/imageupdate>

- for MAG322 - <http://update.infomir.com/mag/322/imageupdate>
- for MAG324 - <http://update.infomir.com/mag/324/imageupdate>

The string is available for edition with help of virtual keyboard (button "KB" on the Remote Control) or USB keyboard.

Current software version:
Ver: 214, Date: Fri Jun 15 19:12:01 EEST 2012
Desc: 0.2.14-250-alpha6

Available software version:
< unknown >
< unknown >

Verify

0% **Start update**

Current software version:
Ver: 214, Date: Fri Jun 15 19:12:01 EEST 2012
Desc: 0.2.14-250-alpha6

Available software version:
Ver: 212, Date: Tue Mar 13 11:16:23 EET 2012
Desc: 0.2.12-r2-250

0% **Start update**

File check finished

1)

firmware versions signed by Public key

2)

Manufacturer firmware which is provided by manufacturer for update/autoupdate from manufacturer servers

From:

<https://docs.infomir.com.ua/> -

Permanent link:

https://docs.infomir.com.ua/doku.php?id=en:stb_webkit:mag322:update_firmware_mag322

Last update: **2019/05/17 11:23**

